


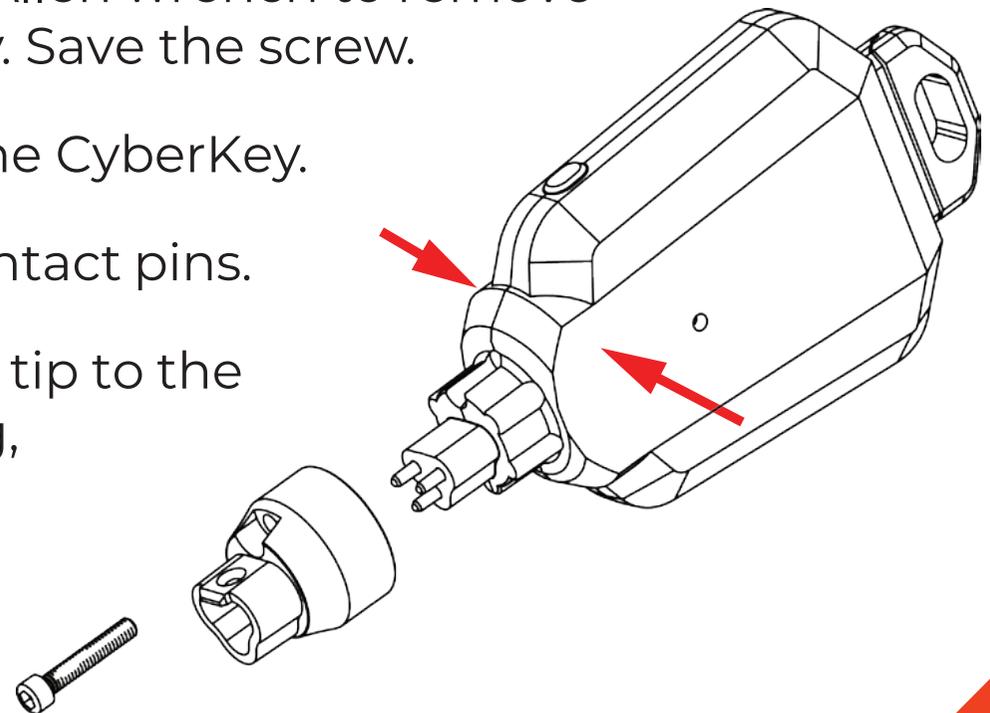

Important: Pinch case tightly by hand on both sides, in the location indicated by the red arrows. Maintain pressure throughout process.

1. With casing secured, use the provided Allen wrench to remove the screw from the tip of the CyberKey. Save the screw.
2. Remove the old tip from the body of the CyberKey.
3. Place the new tip over the nose and contact pins.
4. Replace the screw and secure the new tip to the CyberKey. Tighten the screw until snug, then back it off $\frac{1}{4}$ turn. Do not tighten the screw more than 2 in/lb.



**The Next
Generation
in Access
Control**

AUSTRALIA | HEAD OFFICE
14 John Hines Avenue
Minchinbury NSW 2770
1300 722 311
sales@ekacyberlock.com.au

NEW ZEALAND
16 Parkhead Pl
Albany 0632
+64 (0) 9 368 4802
sales@ekacyberlock.co.nz